ECE 571 – Advanced Microprocessor-Based Design Lecture 14

Vince Weaver http://web.eece.maine.edu/~vweaver vincent.weaver@maine.edu

18 October 2022

Announcements

- HW#6 in the air
- Project was posted, key dates: Nov 10th first thing
- Midterm end of month



HW#5 Review – Cache Sizing

- Haswell (not EP) machine has a 44-bit physical address space (48 bit virtual), 32-kB L1 data cache, 8-way set associative, 64-bytes per line.
 - \circ Offset = 6 bits
 - \circ Index = $2^{15}/2^3/2^6 = 2^6 = 6$ bits

Why does having 12 bits of offset+index makes VIPT caches easier (4096 bytes)

○ 44-6-6=32-bit tag



HW#5 Review – Cache Example

 Everyone had the same results, but everyone (including me) was getting LRU backwards. I gave full credit, but be careful with LRU



HW#5 Review – Haswell-EP Memory Paramaters

- L1-icache 32k/8-way/64B
- L1-cache 32k/8-WAY/64B,4/5 cycles, writeback, shared between threads
- L2 cache 256k/8-way/64B, 12 cycles, writeback
- L3 cache 8MB,64B, writeback
- (What doesn't this say? replacement policy? inclusive/exclusive? write-back?)



HW#5 – Haswell-EP bzip2

Bzip: 11MB footprint
L1-icache = 107k/19B = 0% miss rate
L1-dcache-load = 314M/5.8B = 5.4% miss rate
L2 = 208M/414M = 50% miss rate
LLC 1k/143M = 0% miss rate



HW#5 – Notes on the events

- the kernel default for l1-cache is loads. this actually changed in Linux 4.1 (17 Feb 2015) So your results will change based on kernel version. Annoying. Before there was a l1d-store events
- Should misses from one level of cache match accesses from the next?
 - Shouldn't L1-misses be same as L2-accesses?
 - Why would they not match up?
 - Bug in counters, not counting stores, bug in counter



selection, other things going on in system, shared resources, chip errata, prefetching, etc. LLC actually uses offcore-response events



HW#5 – Notes on bzip2 behavior

- Fits well in icache.
- Why is L2 so bad? single threaded? Prefetching location?
- Why is L3 not accessed much? All of benchmark input can fit in L3 cache so once data is loaded no need to go to main memory.



HW#5 Review – equake_I on Haswell-EP

• e-quake mem footprint 700MB

- \circ L1-icache = 19M/1.4T = 0%
- \circ L1-dcache = 30B/426B = 7%
- $\circ L2 = 24B/61B = 39\%$
- $\circ \ LLC = 2B/15B{=}14\%$



HW#5 – Notes on equake_I behavior

- Again no issues with icache
- L3 much worse than bzip2, at least in part because the working set size doesn't fit in L3



HW#5 – Ampere

eMAG 8180, interesting history Not necessarily a high-end CPU data sheet a bit confusing

L1 i-cache=32 kB, 8-way?
l1 d-cache=32 kB, 8-way?
l2 = 256k shared for 2 cores
L3 = 32MB, slow



HW#5 Review – bzip2 on Ampere

- L1-icache = 307k/7B = 0%
- L1-dcache-load = 235M/8B = 3%
- \bullet L2 = 186M / 1.3B = 14%
- L3? |3c0? = 2M/27M = 9%



Review – What happens on a memory access

- Cache hit, generally not a problem, see later. To be in cache had to have gone through the whole VM process. Although some architectures do a lookup anyway in case permissions have changed.
- Cache miss, then send access out to memory
- If in TLB, not a problem, right page fetched from physical memory, TLB updated



- If not in TLB, then the page tables are walked (by the hardware on x86)
- It no physical mapping in page table, then page fault happens



Review – What happens on a page fault

- The OS process structure has info on what memory regions are valid and what should be there (text/data comes from executable on disk, bss zeroed pages, heap/stack might be auto-allocated zeroed pages)
 "minor" page is already in memory, just need to point a PTE at it. For example, shared memory, shared libraries, etc.
- "major" page needs to be created or brought in from disk.



- Demand paging.
- \circ Needs to find room in physical memory.
- If no free space available, needs to kick something out.
 Disk-backed (and not dirty) just discarded.
 Disk-backed and dirty, written back.
- Memory can be paged to disk. Eventually can OOM.
- \circ Memory is then loaded, or zeroed, and PTE updated.
- Can it be shared? (zero page)
- "invalid" segfault



Operating System Things



Each process has a page table

- When you context switch, simply update the hardware pointer to this
- On x86, CR3?



Memory Protection

- Can mark pages as read-only, execute-only, etc
 Code might want to be read-only
 Stack might want read/write but no-execute
 some of data segment (const) might be read-only
- Why?



What happens on a fork?

- Do you actually copy all of memory?
 Why would that be bad? (slow, also often exec() right away)
- Page table marked read-only, then shared
- Only if writes happen, take page fault, then copy made Copy-on-write



Virtual Memory – Cache Concerns



Cache Issues – Page Tables are Cached


- Page table Entries are cached too
- What happens if more memory can fit in the cache than can be covered by the TLB?
- If you have 128 TLB entries * 4kB you can cover 512kB
- If your cache is larger (say 1MB) then a simple walk through the cache will run out of TLB entries, so page lookups will happen (bringing page table data into cache) and so you do not get maximal usefulness from the cache
- This has happened in various chips over the years



Cache Issues – Do Caches have Physical or Virtual Addresses?



Physical Caches

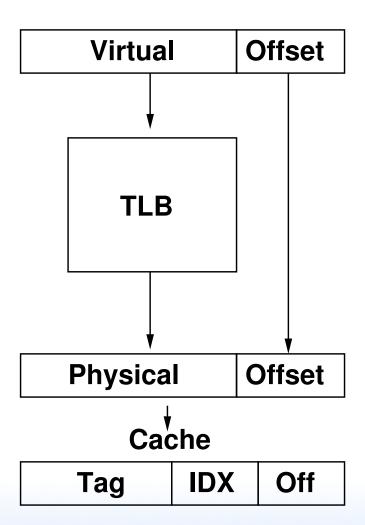




Physical Caches, PIPT

- Location in cache based on physical address
- Can be slower, as need TLB lookup for each cache access
- No need to flush cache on context switch (or ever, really)
- No need to do TLB lookup on writeback



Virtual Caches

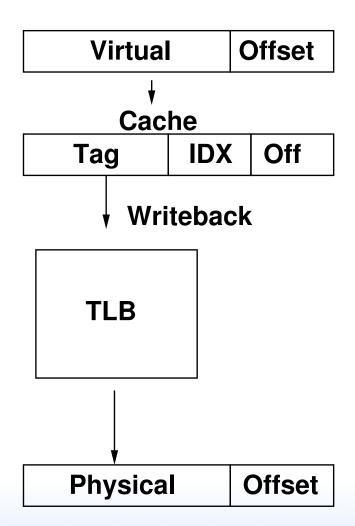



Virtual Caches


- Location in cache based on virtual address
- Faster, as no need to do TLB lookup before access
- Will have to use TLB on miss (for fill) or when writing back dirty addresses
- Cache might have extra bits to indicate permissions so TLB doesn't have to be checked on write
- Aliasing: Homonyms: Same virtual address (in multiple processes) map to different physical page
 Must flush cache on context switch?



- How to avoid flushing? Have a process-id (ASID).
 Can also implement sharing this way, by both processes mapping to same virt address.
- Having kernel addresses high also avoids aliasing
- Aliasing: Synonyms: Phys address has two virtual mappings
 - \circ Operating system might use page or cache coloring
- Operating system has to do more work.



VIPT

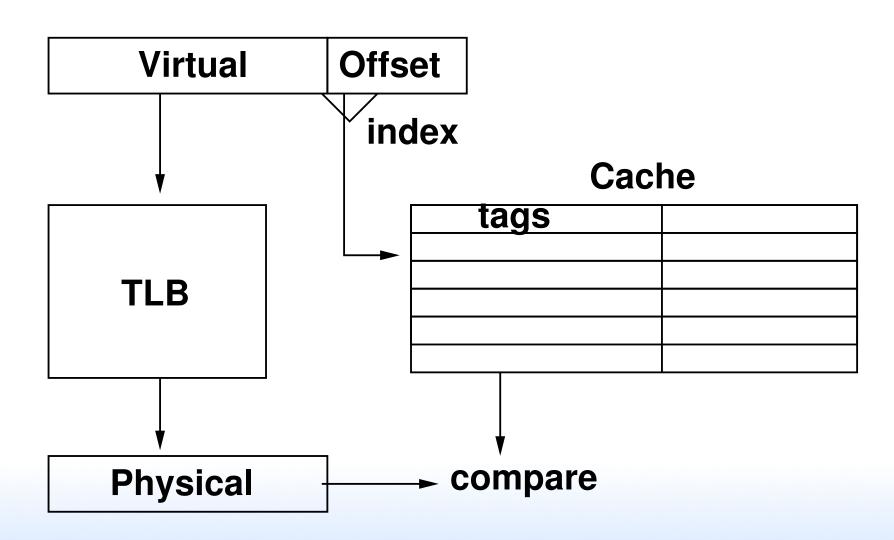



- Cache lookup and TLB lookup in parallel. Cache size + associativity must be less than page size.
- If properly sized (so that the page offset fits completely in the index) then index bits are the same for virt and physical.
- If not sized, the extra index bits need to be stored in the cache so they can be passed along with the tag when doing a lookup
- No need to flush or track ASID on context switch



Combinations

- PIPT older systems. Slow, as must be translated (go through TLB) for every cache access (don't know index or tag until after lookup)
- VIVT fast. Do not need to consult TLB to find data in cache.
- VIPT ARM L1/L2. Faster, cache line can be looked up in parallel with TLB. Needs more tag bits.
- PIVT theoretically possible, but useless. As slow as PIPT but aliasing like VIVT.



Wrap-up Summary



Quick run-through, the path of a load

- OoO, load buffer, etc
- VIPT. So on access it looks up the physical tag in TLB while reading out the tags from each way with the index.
 Also keep in mind MESI is going on at this level.
- If tag from TLB matches a tag from cache, hit! Good! Cache hit!
- If tag in TLB but not in cache, cache miss.
- If tag not in TLB, TLB miss. Won't know if cache hit until later.



- Now let the hardware walk the page tables.
- If hardware finds the page, great! Return it back up to the TLB
- If hardware can't find the page, time to get the Operating System involved. Page fault.
- Hardware has a list of what should be in memory where (from the executable). Typically these are demandloaded
 - \circ Text/code read from disk
 - \circ Data read from disk
 - \circ BSS allocate zeros



- \circ Stack if near top growing down, auto-grow
- \circ Heap similar to stack
- Shared page- could already be in memory (shared lib?)
 Just need to point to it.
- \circ Zeros just have one page of zeros you can point to
- Paged out to disk have offset in page file, need to load it
- Time to bring in the page! Need to find room in Physical RAM. If no room, need to make room. Possibly paging out to disk (this is what LRU/dirty bits are used for). What kind of issues come up when low on RAM and



constantly paging same pages in and out (thrashing?)

- Page now in physical RAM, time to go backwards.
 Update the page table
- Fill in the TLB. Return to memory.
- If page fault occurred, usually re-execute the instruction.
- Issues
 - Could you have race where you re-execute it and the page had gotten swapped out again?
 - Can we page out the page tables? What can go wrong there? Double faults? How many nested page faults can you handle?



Quick run-through, the path of a store

• Is it much different?

